

 





 







**ITEM NAME/NOM D'ITEM: BRICKELL DINING CHAIR**

**ITEM # /NO.ITEM: 100014/100113**

**PARTS LIST/LISTE DES PIÈCES**




(1)	(2)	(3)	(4)	(5)	(6)
					<p>A  x4</p> <p>B  x6</p> <p>C <small>DIA 10 X 35MM</small>  x2</p> <p>D  x4</p> <p>E <small>DIA 8 X 35MM</small>  x8</p> <p>F  x2</p> <p>G  x2</p> <p>H  x1</p>
x2	x1	x1	x1	x1	

**ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE**


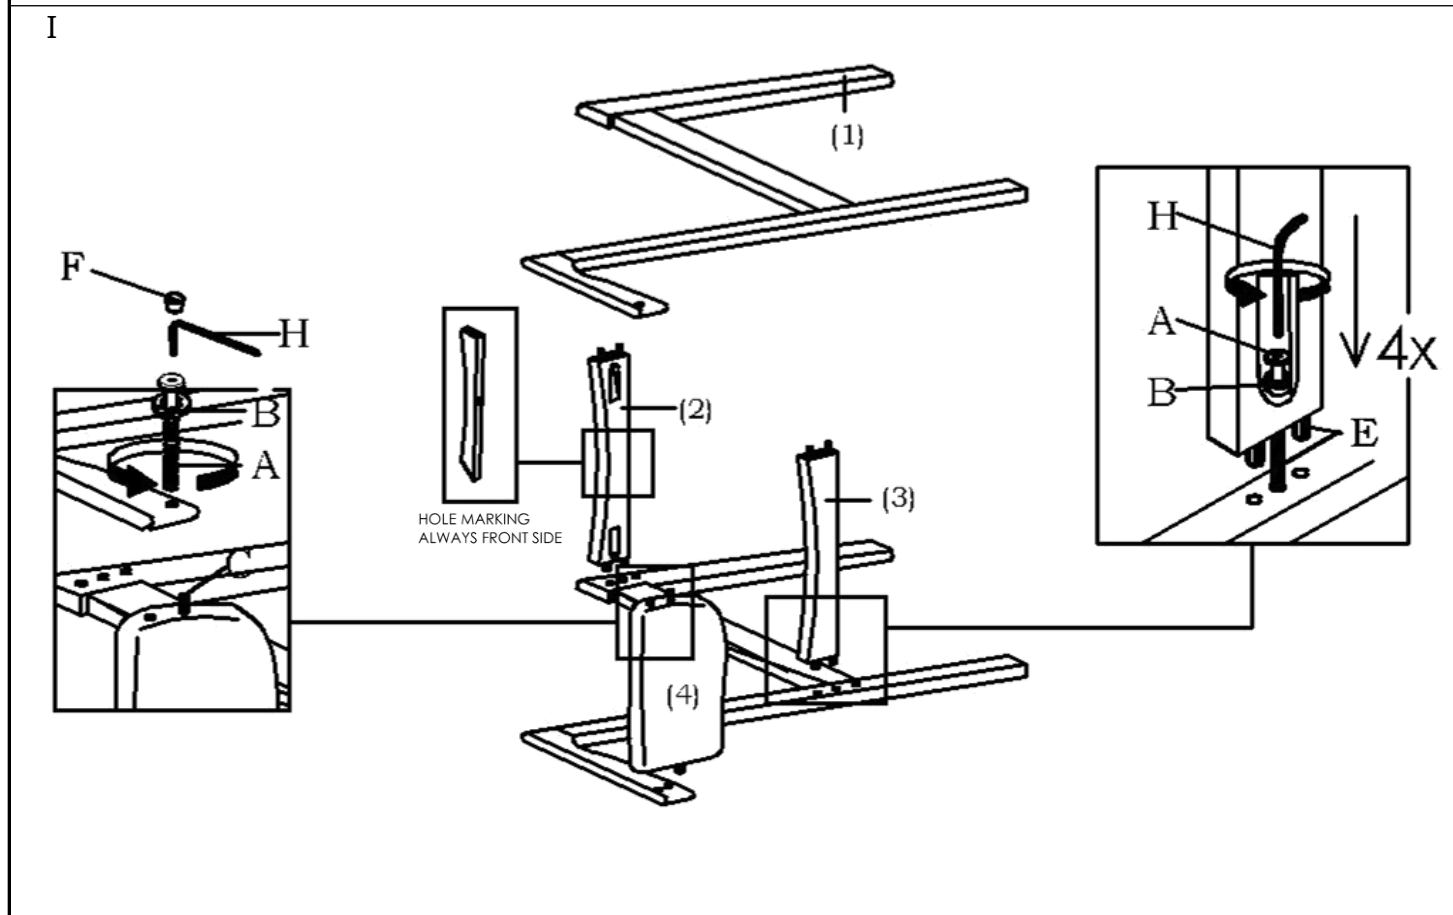


For missing parts or damaged parts, please call USA : 1-866-798-6663  
Canada : 514-382-6661


II

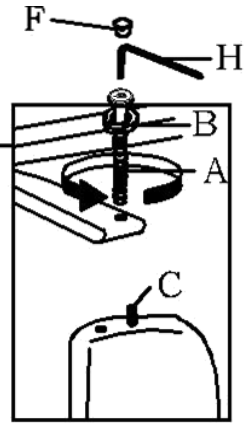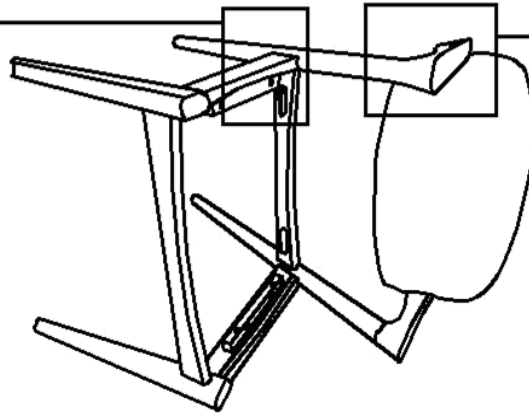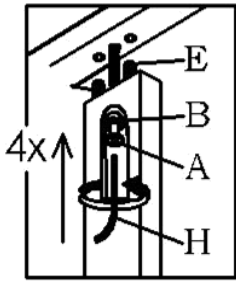

III

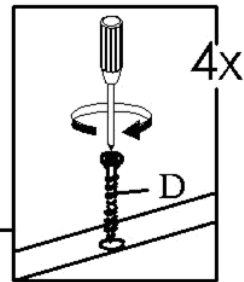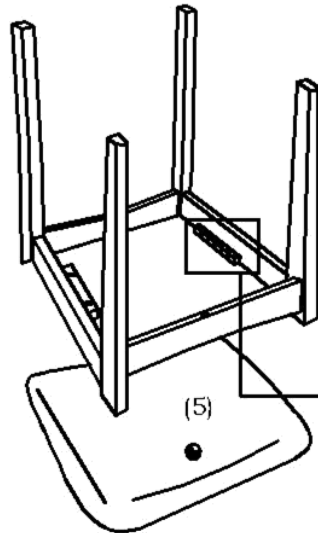

IV

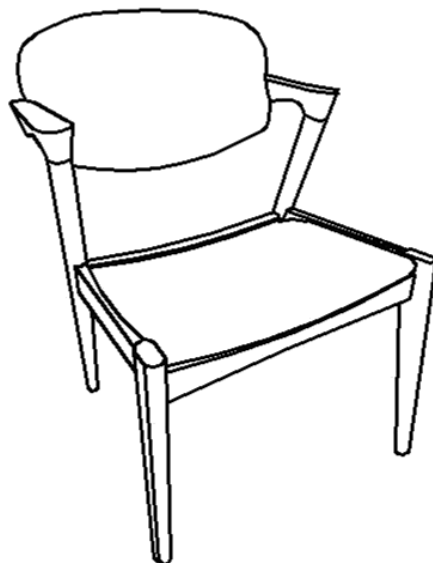

For missing parts or damaged parts, please call USA : 1-866-798-6663  
Canada : 514-382-6661