















ITEM NAME/NOM D'ITEM: BURST DESK/TOURS DESK
 ITEM #/NO. ITEM: 101877/101878

PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)
				A.  Ø6 x 2 B.  M6x18mm x 2 C.  M6x30mm x 2 D.  4mm x 1 E.  Ø8 x 12 F.  M8x35mm x 4 G.  M8x45mm x 8 H.  5mm x 1
x1	x2	x2	x2	

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

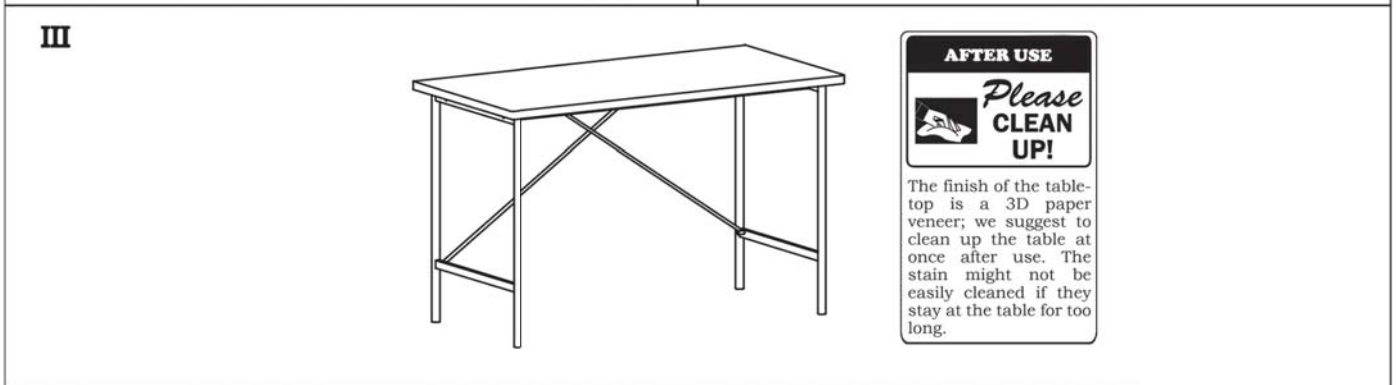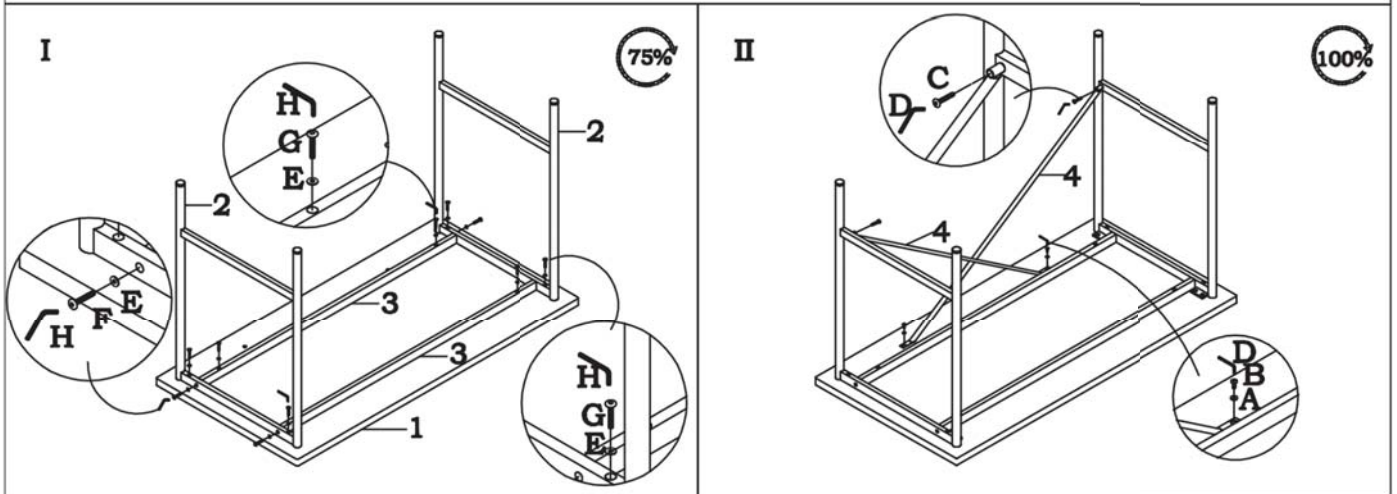

For missing parts or damaged parts, please call

USA : 1-866-798-6663

Canada : 514-382-6661

AI-V2-200903