








# ITEM NAME /NOM D' ITEM:ENGINEER LOW BACK OFFICE CHAIR

ITEM # /NO. ITEM:205895 (BLACK/NOIR) 205896 (WHITE/BLANC)

205897 (ESPRESSO/EXPRESSO)


Enquiry:parts@zuomod.com

## PART LIST/Liste des pièces


(1)	(2)	(3)	(4)	(5)
 X1	 X2	 X1	 X1	1.  X5 2.  X6 6*40mm 3.  X1

## INSTRUCTION



**A**

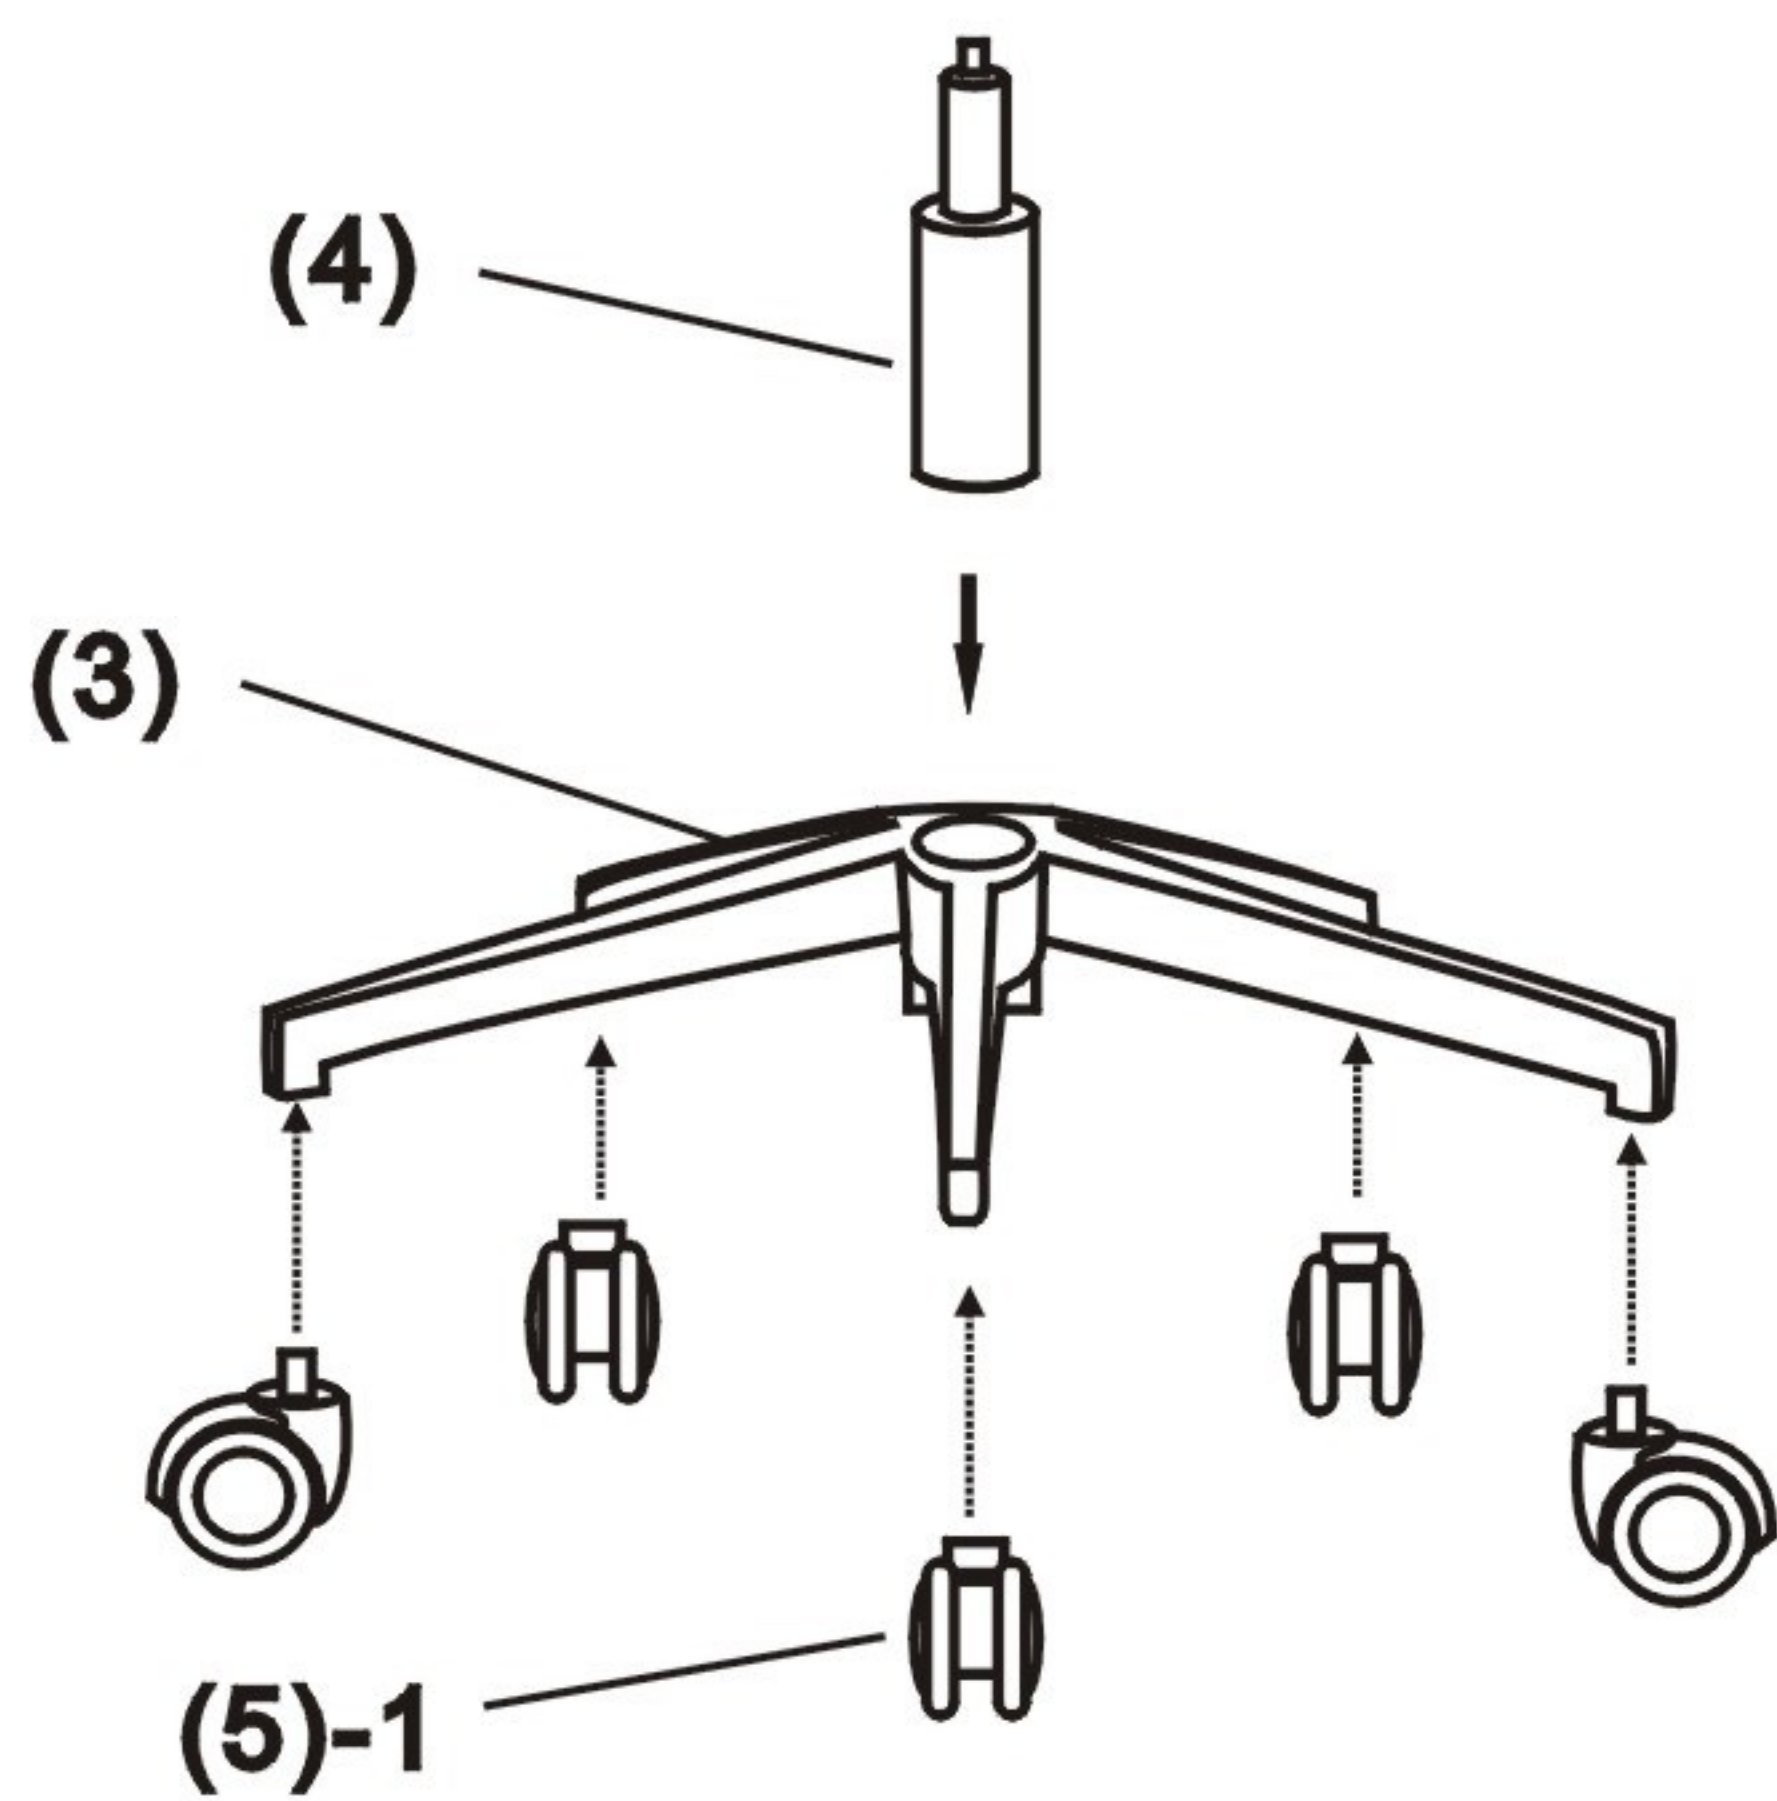

**B**

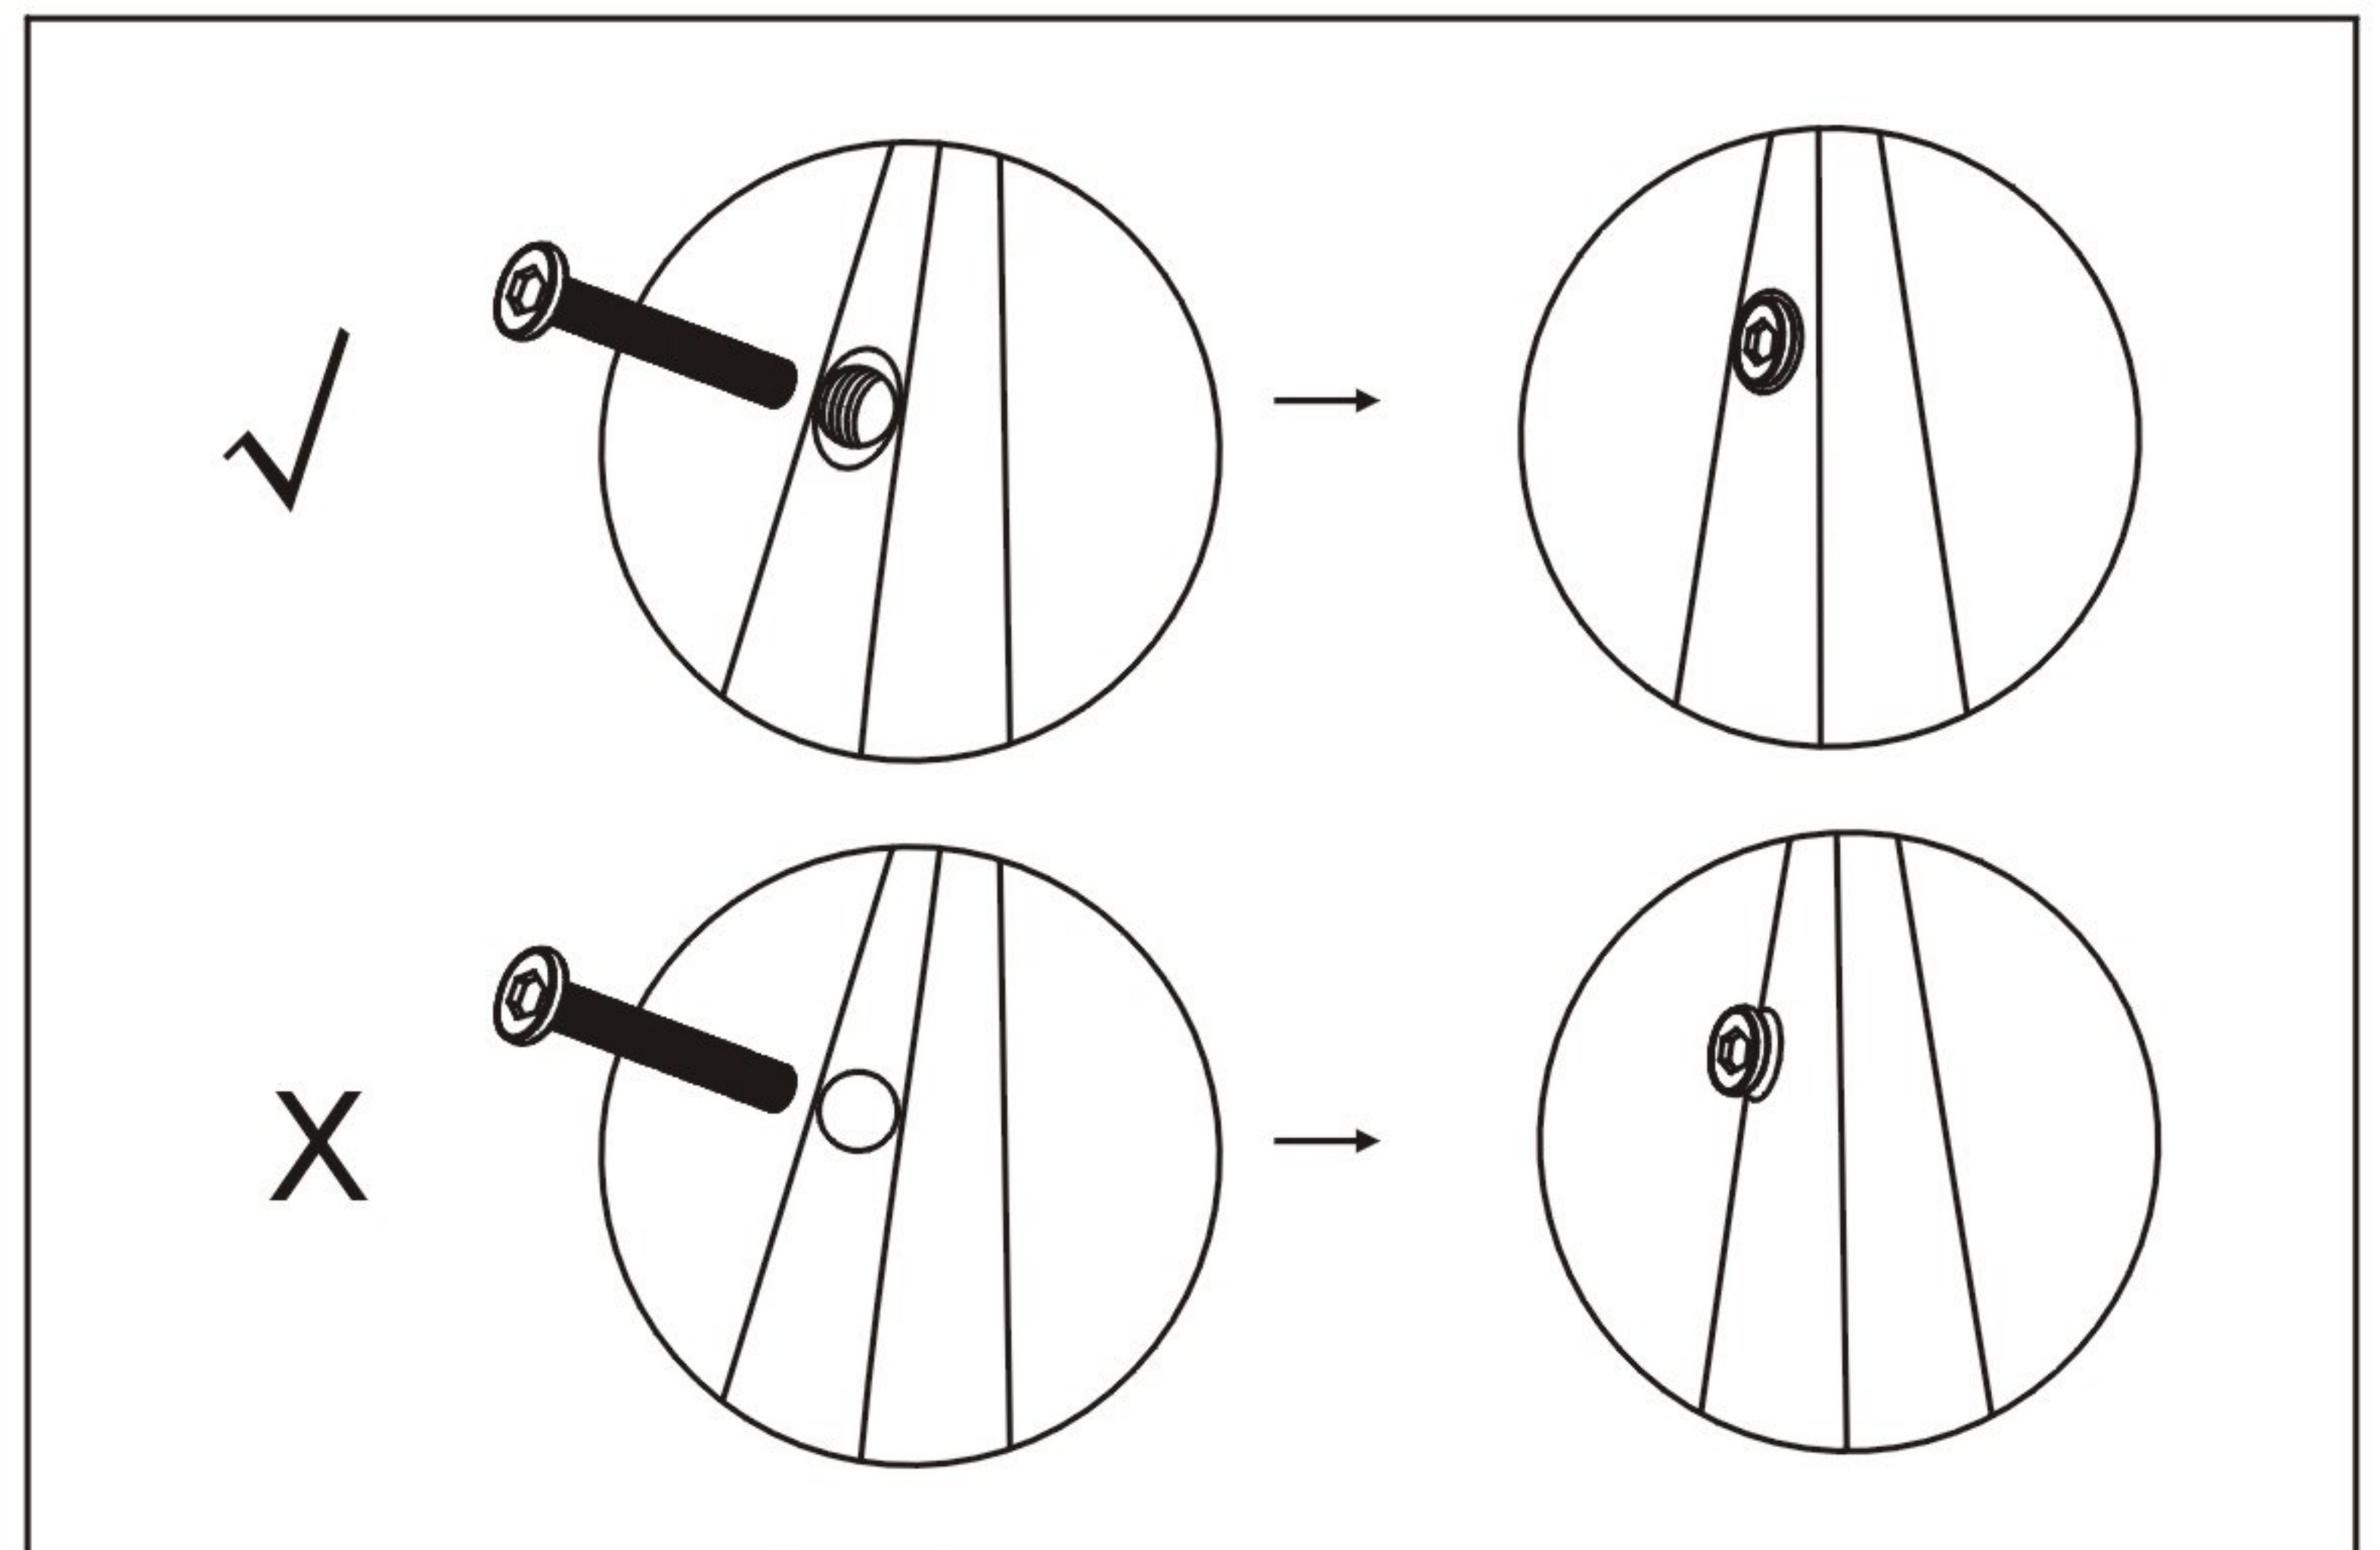

**C**

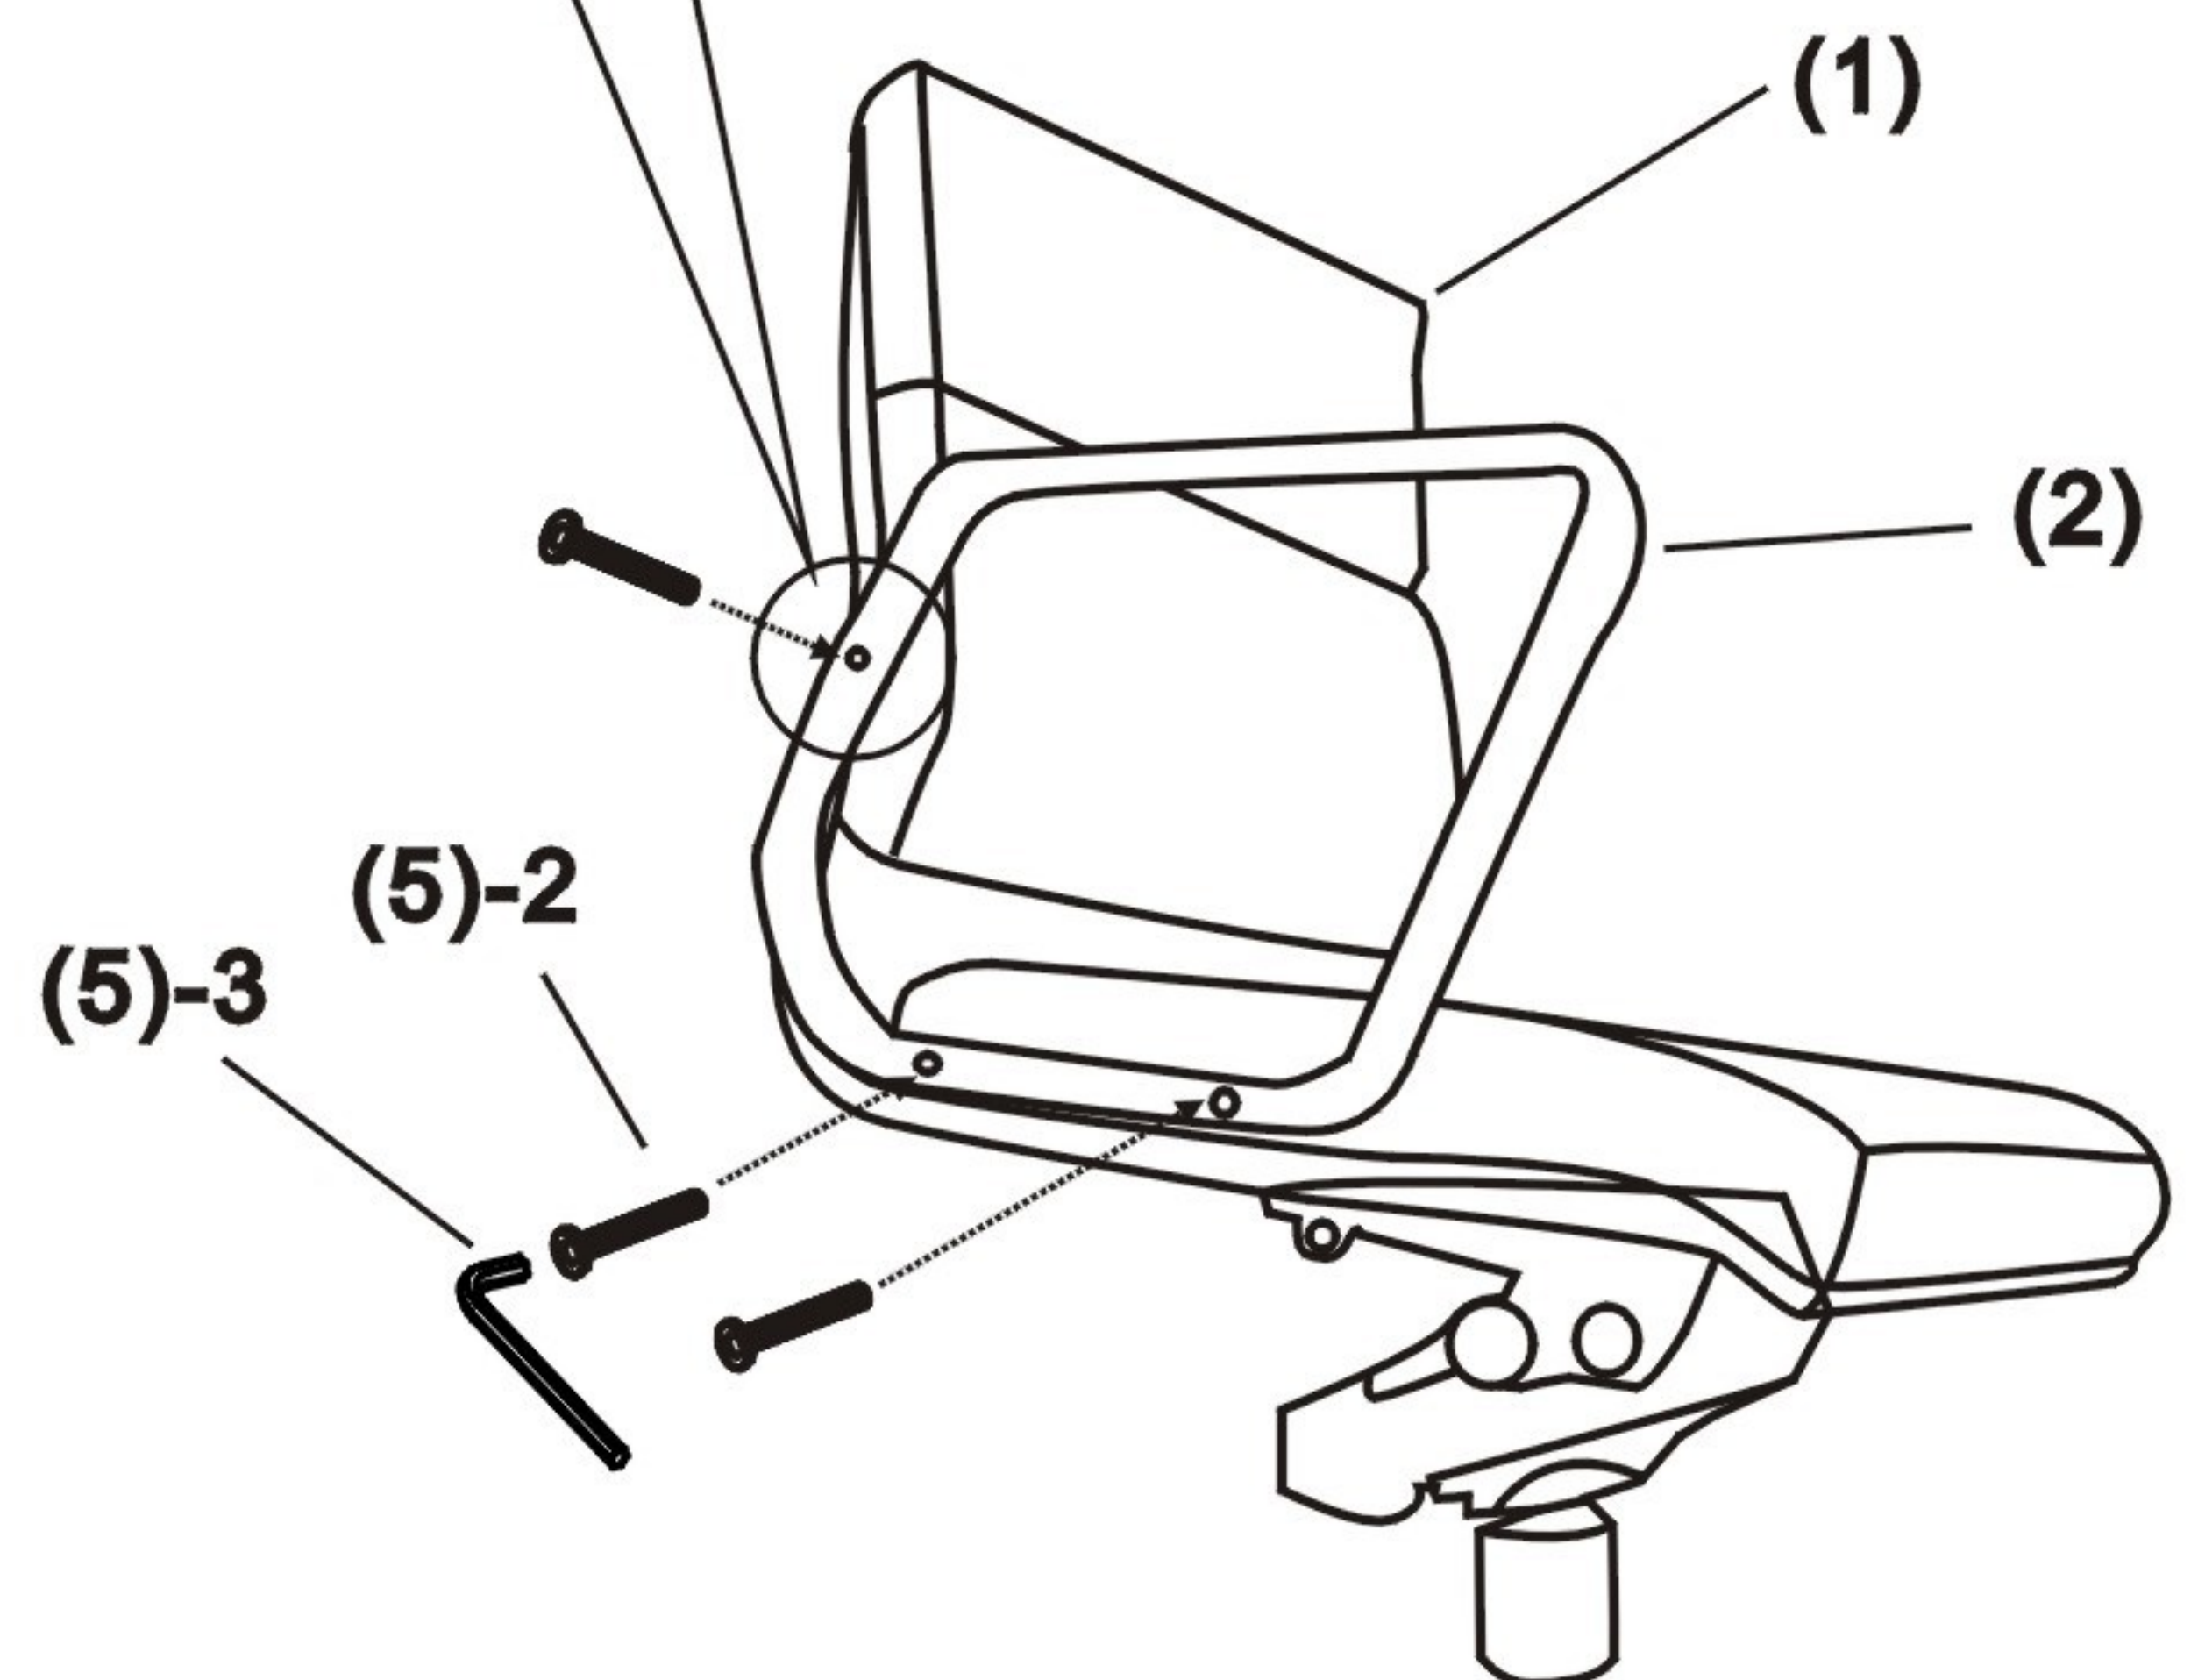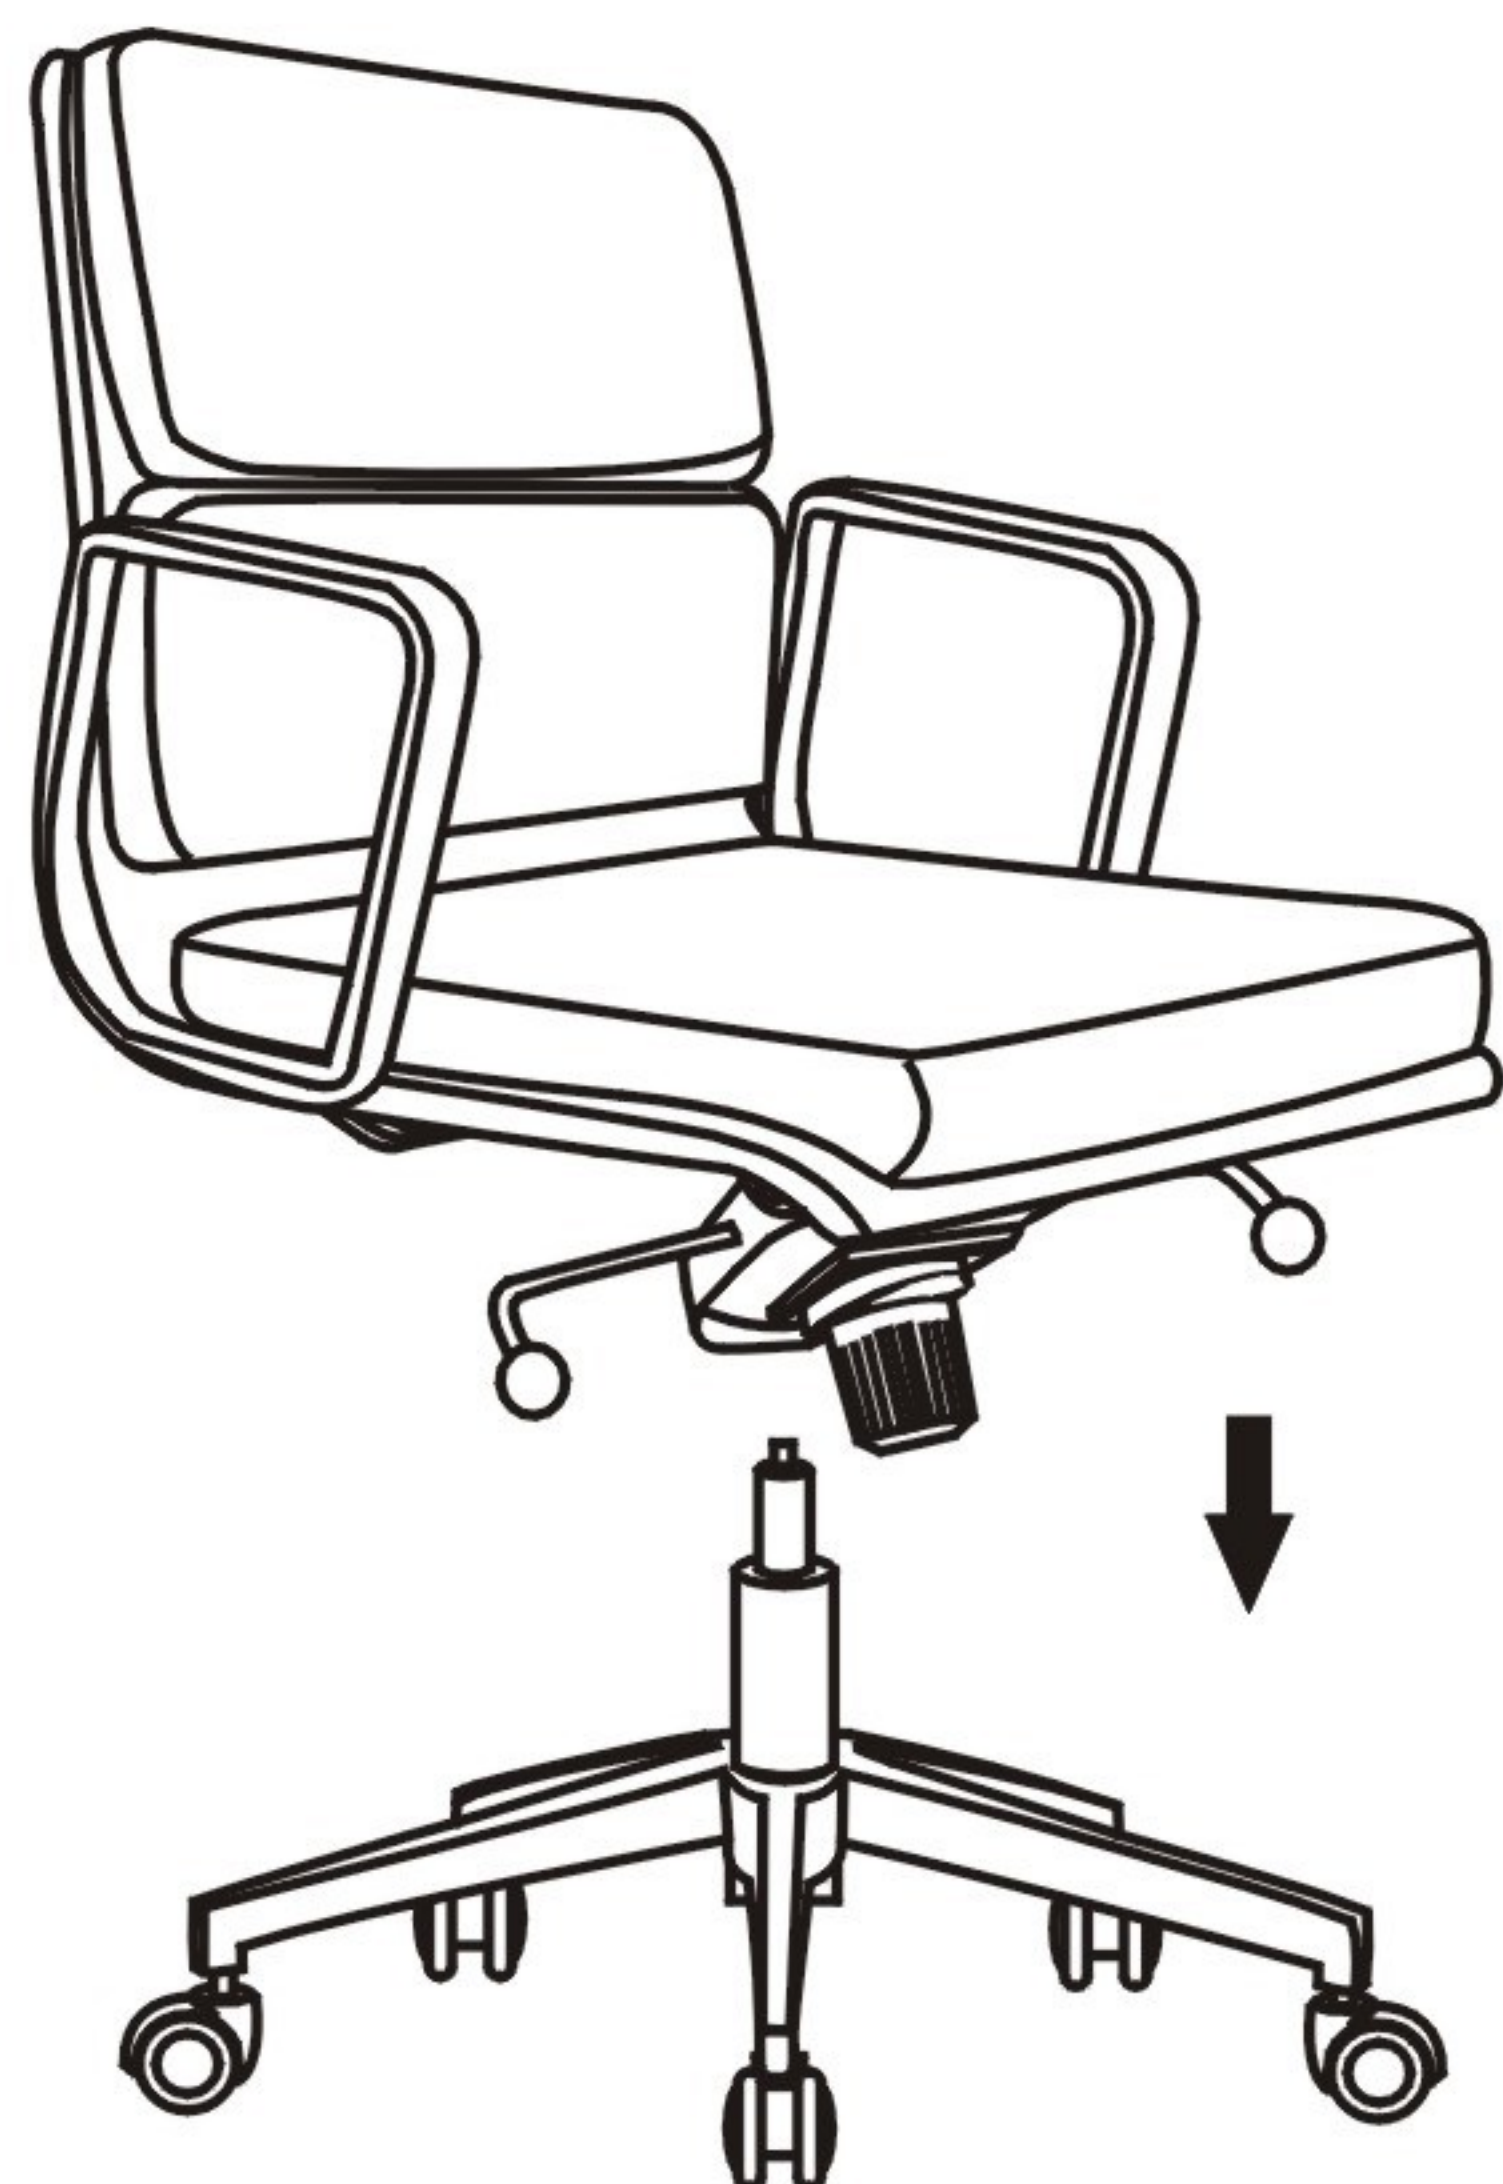

Put all the screws and tighten at the same time